


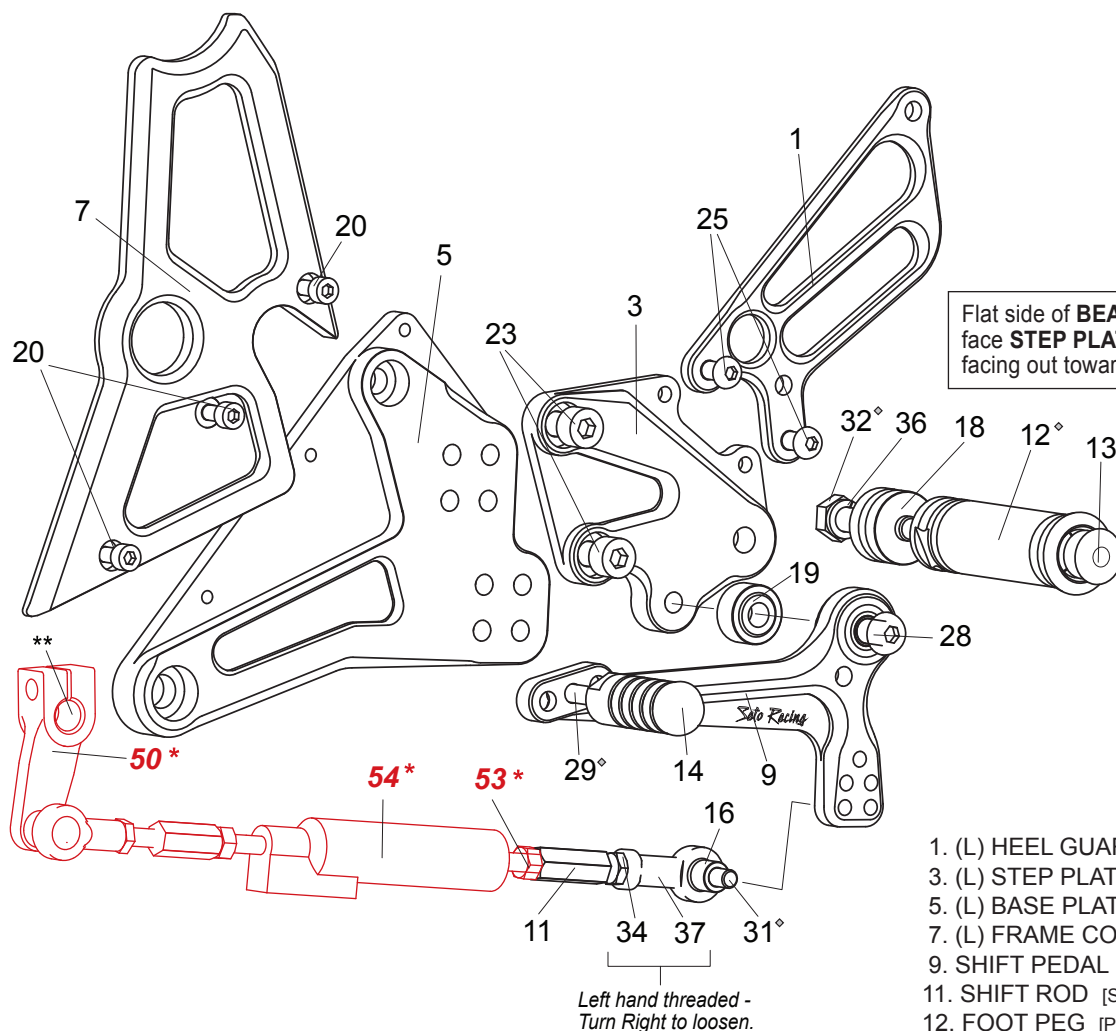


1. (L) HEEL GUARD [HG-6L]
3. (L) STEP PLATE [K-ZH2SP-L]
5. (L) BASE PLATE [K-ZH2BP-L]
7. (L) FRAME COVER(BK) [K-ZH2FMCV-L]
9. SHIFT PEDAL [SPD-CP7585]
11. SHIFT ROD [SPD-CR045F6M6L]
12. FOOT PEG [PEG] x 2
13. FOOT PEG END CAP [ST-002] x 2
14. PEDAL TIP (DELFIN) [ST-001D18] x 2
16. ROD END COLLAR 8(GD) [RDED-CLR8]
18. PEG COLLAR 15 [PEGCLR-15]
19. BEARING COLLAR 10(BK) [PEGBGCLR-10SB]
20. SOCKET HEAD M5x10mm [SBT-M510] x 3
23. SOCKET HEAD M8x15mm [SBT-M815] x 2
25. BUTTON HEAD M6x10mm [BBT-M610] x 2
28. BUTTON HEAD M8x35mm [BBT-M835]
29. LOW SOCKET HEAD M6x20mm [LSBT-M620]
31. HEX HEAD M6x25mm [HBT-M625]
32. HEX HEAD M8x40mm [HBT-M840]
34. REVERSE JAM NUT M6 [JNT-6L]
36. SPLIT WASHER M8 [SWS-8]
37. REVERSE FEMALE ROD END M6 [RDED-F6L]

*** STOCK KAWASAKI PARTS**

50. SHIFT ARM

53. NUT

54. SHIFTER SWITCH

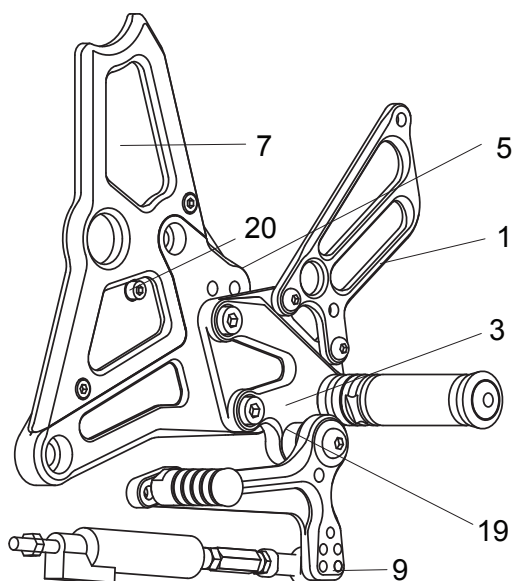

** Adjust mount angle of stock shift arm.

◇ Apply threadlocker (Loctite or Vibra Tite or similar) to these bolts before tightening.
(Factory pre-tightened parts such as the Shift Pedal have already been Loctited.)

∞ Clean and lubricate rod end ball joint periodically.