


[R]

(For relocating Master Cylinder)

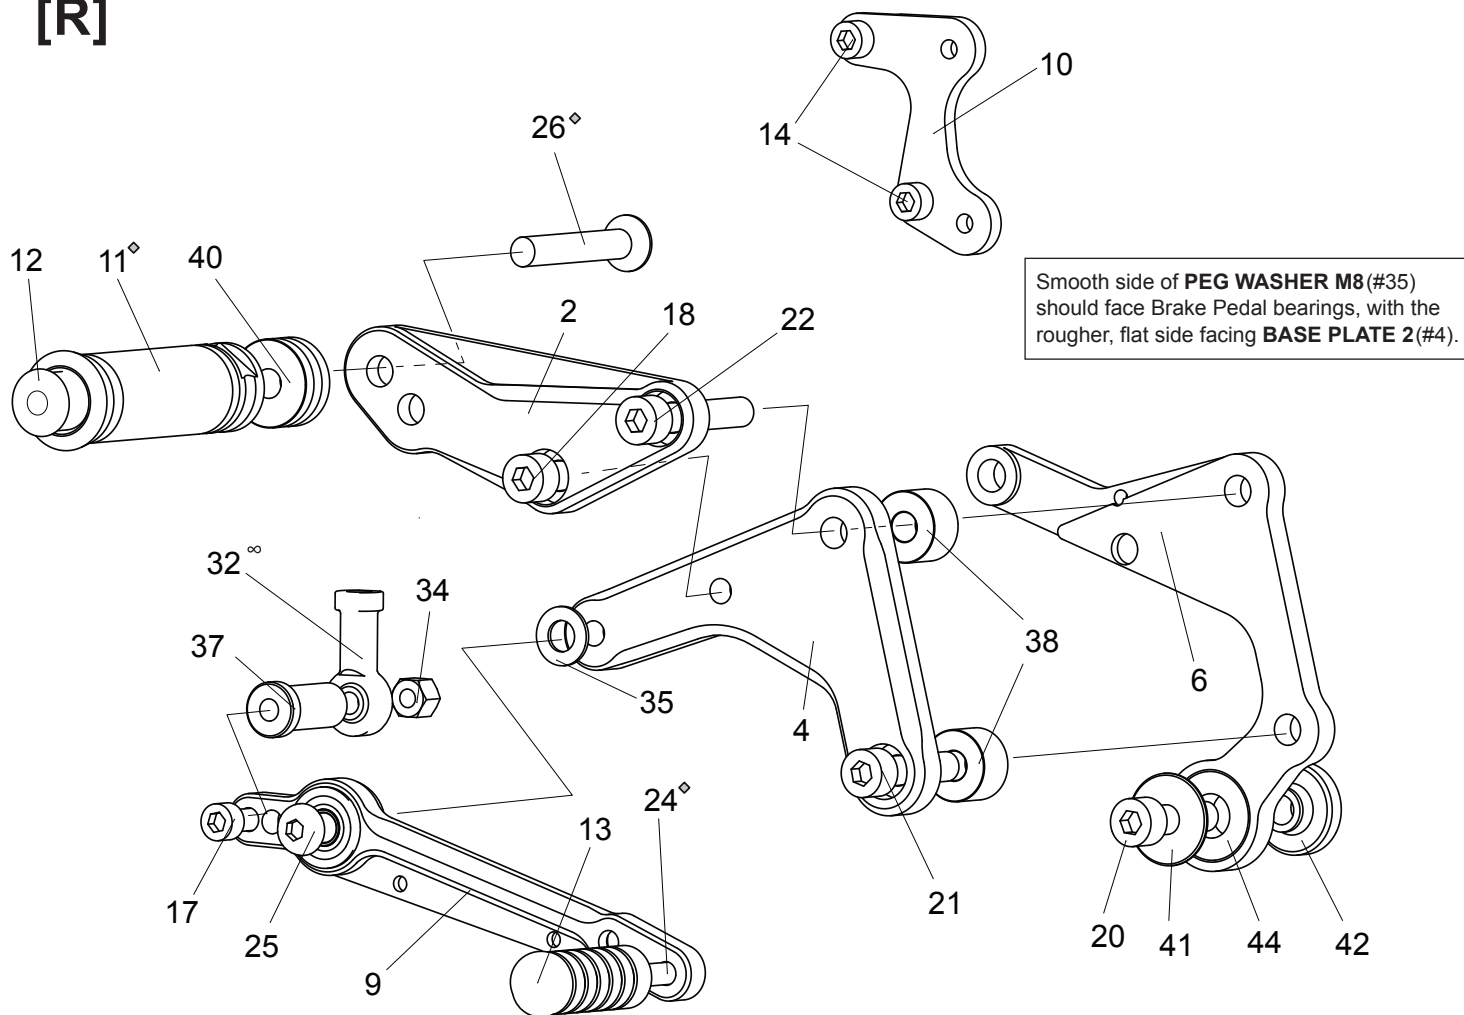

- 2. STEP PLATE [R] [S-RGSP-R]
- 4. BASE PLATE 2 [R] (BK) [S-RGBP-R2]
- 6. BASE PLATE 1 [R] (BK) [S-RGBP-R1]
- 9. BRAKE PEDAL [BPD-SBT165]
- 10. MASTER CYLINDER RELOCATION PLATE
- 11. FOOT PEG [PEG]
- 12. FOOT PEG END CAP [ST-002]
- 13. PEDAL TIP [ST-001D18]
- 14. SOCKET HEAD M6x15mm [SBT-M615] x 2
- 17. SOCKET HEAD M6x55mm [SBT-M655]
- 18. SOCKET HEAD M8x15mm [SBT-M815]
- 20. SOCKET HEAD M8x30mm [SBT-M835]
- 21. SOCKET HEAD M8x35mm [SBT-M835]
- 22. SOCKET HEAD M8x45mm [SBT-M845]
- 24. BUTTON HEAD M6x20mm [BBT-M620]

- 25. BUTTON HEAD M8x25mm [BBT-M825]
- 26. FLAT HEAD M8x40mm [FBT-M840]
- 32. FEMALE ROD END 6-M8 [RDED-F6-8]
- 34. LOCK NUT M6 [LNT-6]
- 35. PEG WASHER M8 [PWS-8]
- 37. COLLAR 30-6 (BK)
- 38. COLLAR 12-8 (BK) x 2
- 40. FOOT PEG COLLAR 12 [PEGCLR-12]
- 41. URETHANE DAMPER COLLAR 2
- 42. URETHANE DAMPER COLLAR 6
- 44. URETHANE DAMPER 10-12
(PRE-INSTALLED)

Not Pictured:

BRAKE LIGHT SWITCH P-1.0 [BSW-1]

◇ Apply threadlocker (Loctite, Vibra Tite or similar) to these bolts before tightening.
(Factory pre-tightened parts such as the Brake Pedal have already been Loctited).

∞ Clean and lubricate rod end ball joints periodically.

Due to running improvements in the designs of Sato parts, some new replacement parts may look somewhat different than the original parts with the same part #. These slight differences are mostly cosmetic and have no effect on performance.