


[L]

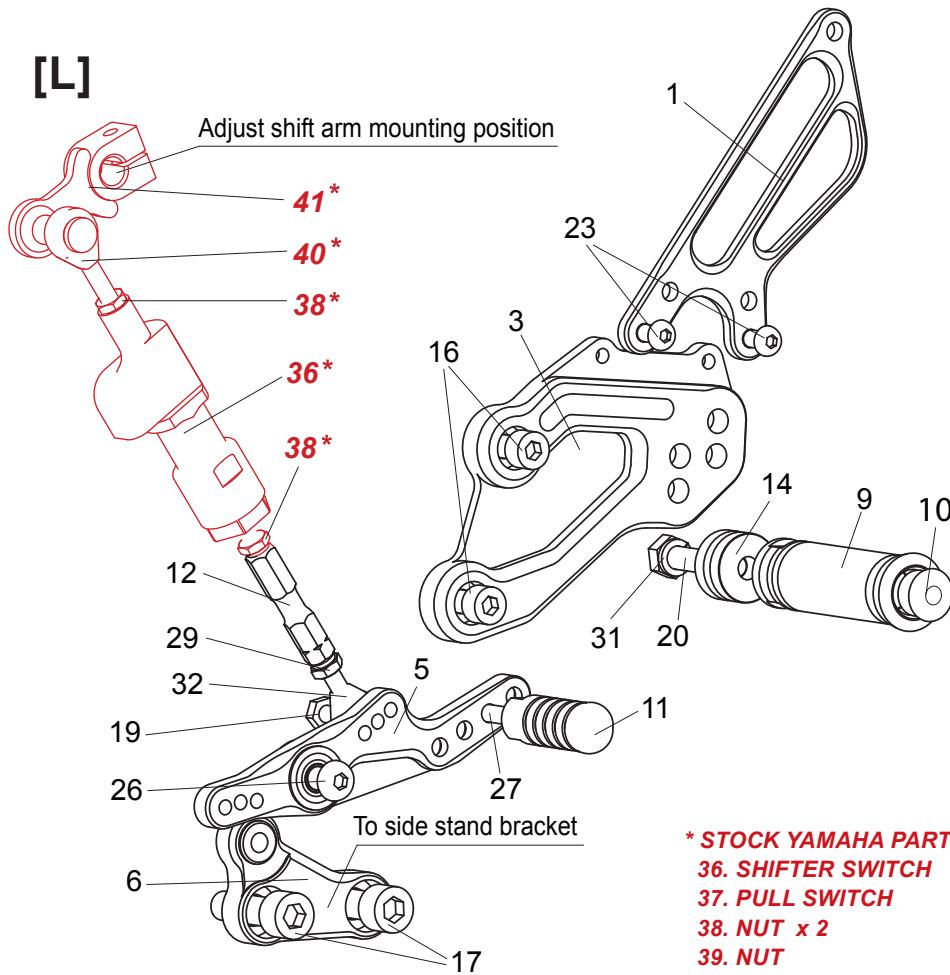


*** STOCK YAMAHA PARTS:**

- 36. SHIFTER SWITCH
- 37. PULL SWITCH
- 38. NUT x 2
- 39. NUT
- 40. ROD END
- 41. CHANGE ARM

1. HEEL GUARD [L] [HG-3L]
2. HEEL GUARD [R] [HG-9R]
3. STEP PLATE [L] [Y-R7SP-L]
4. STEP PLATE [R] [Y-R7SP-R]
5. SHIFT PEDAL (BK) [SPD-CPRS66B]
6. SHIFT BASE (BK) [SB-YR7]
7. BRAKE PEDAL [BPD-19]
8. MASTER STAY [Y-R7MS]
9. FOOT PEG [PEG] x 2
10. FOOT PEG END CAP [ST-002] x 2
11. PEDAL TIP (DELIN) [ST-001D18] x 2
12. SHIFT ROD 50 (BK) [SRD-50B]
13. ROD END COLLAR 15 (BK) [RDED-CLR15]
14. PEG COLLAR 15 [PEGCLR-15] x 2
15. SOCKET HEAD M6x40mm [SBT-M640]
16. SOCKET HEAD M8x20mm [SBT-M820] x 4
17. SOCKET HEAD M10x35mm (P-1.25) [SBT-M1035] x 2
18. HEX HEAD M5x6mm [HBT-M56]
19. HEX HEAD M6x18mm [HBT-M618]
20. HEX HEAD M8x40mm [HBT-M840] x 2
21. BUTTON HEAD M5x15mm [BBT-M515]
22. BUTTON HEAD M5x35mm [BBT-M535]
23. BUTTON HEAD M6x10mm [BBT-M610] x 2
24. BUTTON HEAD M6x12mm [BBT-M612] x 2
25. BUTTON HEAD M8x20mm [BBT-M820] x 2
26. BUTTON HEAD M8x25mm [BBT-M825] x 2
27. LOW SOCKET HEAD M6x20mm [LSBT-M620] x 2
28. NUT M5 [NUT-5] x 2
29. REVERSE JAM NUT M6 [JNT-6L]
30. LOCK NUT M6 [LNT-6]
31. SPLIT WASHER M8 [SWS-8] x 2
32. REVERSE MALE ROD END M6 [RDED-M6L]
33. FEMALE ROD END 6-M8 [RDED-F6-8]
34. SPRING 8-25 [RS-RSP825]
35. PULL SWITCH STAY 16 [PSTAY-16]

[R]

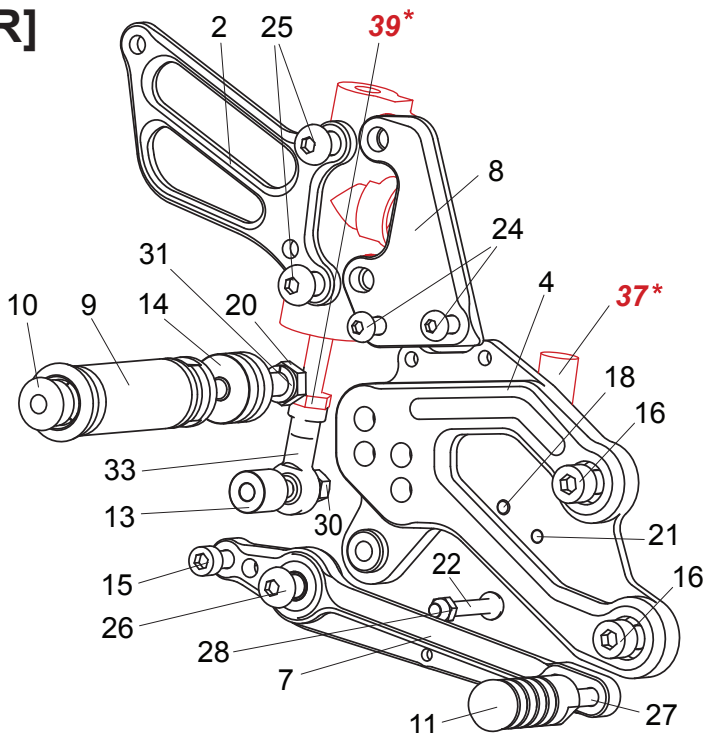

(BACK SIDE)

