




[R]

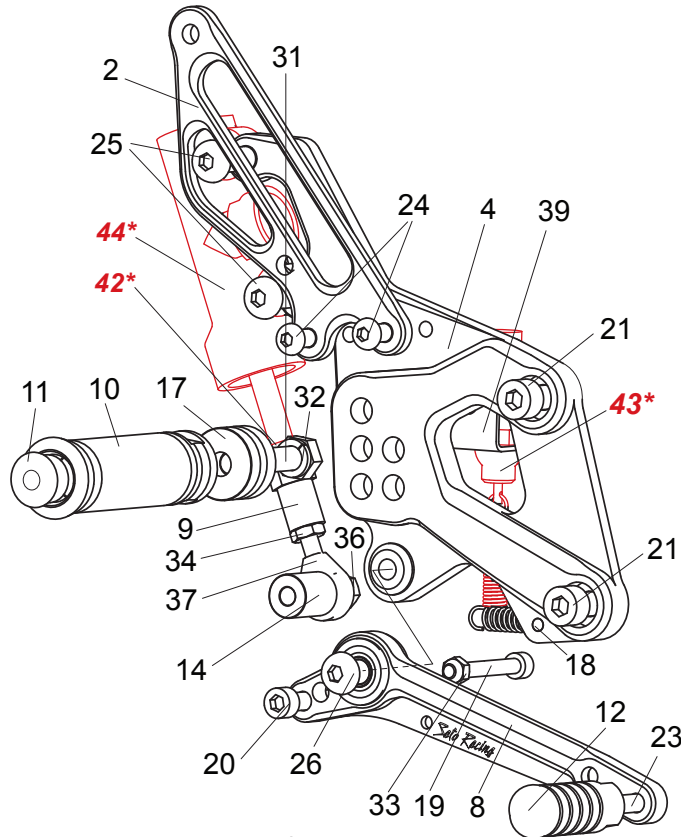

(BACK SIDE)

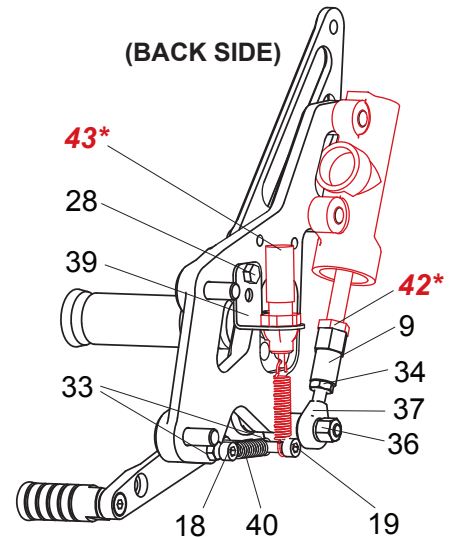

[L]

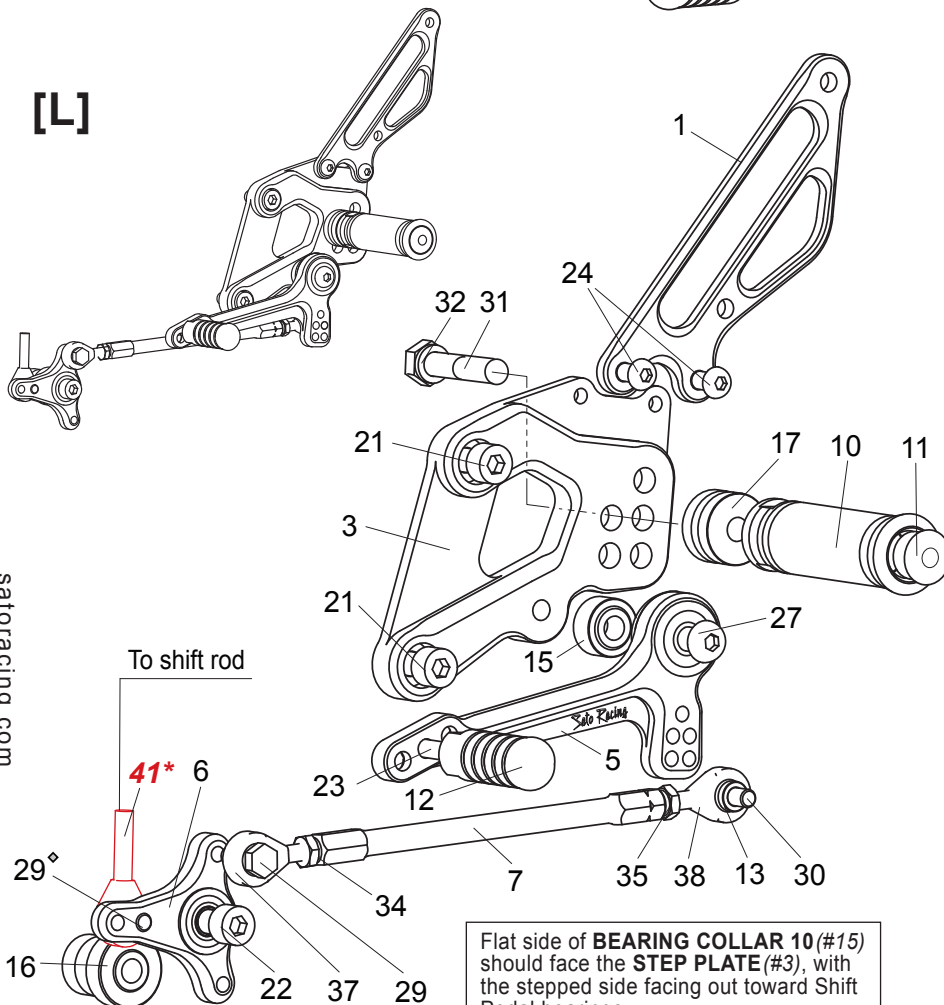

1. HEEL GUARD [L] [HG-8L]
2. HEEL GUARD [R] [HG-8R]
3. STEP PLATE [L] [Y-MT0921SP-L]
4. STEP PLATE [R] [Y-MT0921SP-R]
5. SHIFT PEDAL [SPD-0912]
6. SHIFT LINK (BK) [S-LINK70-80]
7. SHIFT ROD 140 (BK) [SRD-140B]
8. BRAKE PEDAL [BPD-11b]
9. BRAKE ROD ADAPTER M6-8 [BRD-ADPTRM6-8]
10. FOOT PEG [PEG] x 2
11. FOOT PEG END CAP [ST-002] x 2
12. PEDAL TIP (DELFIN) [ST-001D18] x 2
13. ROD END COLLAR 3 (GD) [RDED-CLR3]
14. ROD END COLLAR 19 (BK) [RDED-CLR19]
15. BEARING COLLAR 10 (BK) [PEGBGCLR-10SB]
16. SHIFT BASE (BK) [SB-YMT0921]
17. PEG COLLAR 15 [PEGCLR-15] x 2
18. SOCKET HEAD M5x12mm [SBT-M512]
19. SOCKET HEAD M5x40mm [SBT-M540]
20. SOCKET HEAD M6x45mm [SBT-M645]
21. SOCKET HEAD M8x20mm [SBT-M820] x 4
22. SOCKET HEAD M8x60mm [SBT-M860]
23. LOW SOCKET HEAD M6x20mm [LSBT-M620] x 2
24. BUTTON HEAD M6x10mm [BBT-M610] x 4
25. BUTTON HEAD M8x20mm [BBT-M820] x 2
26. BUTTON HEAD M8x25mm [BBT-M825]
27. BUTTON HEAD M8x35mm [BBT-M835]
28. HEX HEAD M5x6mm [HBT-M56]
29. HEX HEAD M6x18mm [HBT-M618] x 2
30. HEX HEAD M6x20mm [HBT-M620]
31. HEX HEAD M8x40mm [HBT-M840] x 2
32. SPLIT WASHER M8 [SWS-8] x 2
33. NUT M5 [NUT-5] x 2
34. JAM NUT M6 [JNT-6] x 2
35. REVERSE JAM NUT M6 [JNT-6L]
36. LOCK NUT M6 [LNT-6]
37. MALE ROD END M6 [RDED-M6] x 2
38. REVERSE MALE ROD END M6 [RDED-M6L]
39. PULL SWITCH STAY 16 [PSTAY-16]
40. SPRING 8-25 [RS-RSP825]

*** STOCK YAMAHA PARTS:**

- 41. ROD END**
42. NUT
43. PULL SWITCH
44. MASTER CYLINDER

Flat side of **BEARING COLLAR 10 (#15)** should face the **STEP PLATE (#3)**, with the stepped side facing out toward Shift Pedal bearings.